

HP LC2640N (26") HD Ready LCD Television
HP LC3040N (30") HD Ready LCD Television


Start Here




- Identify the type of connectors your home entertainment equipment uses, then go to the corresponding step on this poster and follow those directions. (Example: To connect a cable or satellite set-top-box which connects via S-video cabling, refer to step 6, *Connect an S-video device*.)
- Refer to the user documentation for advanced connections.
- Apply power to all components and then to the TV.
- Finally, refer to the section titled "First Time Setup for Channels" in your user documentation to finalize your TV setup.

Contents


- HP LCD TV with stand
- Speakerbars (2)

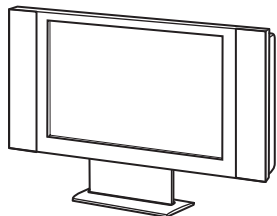

- Documentation kit
- Remote control with AA batteries (2)
- Speaker cables (2)
- Antenna cable
- AC power cable
- DVI cable
- VGA cable
- Component cable
- S-video cable
- Composite cable

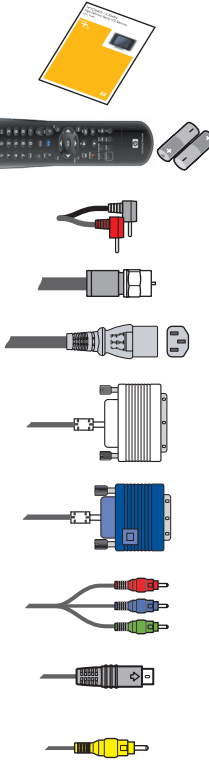


The information in this document is subject to change without notice.

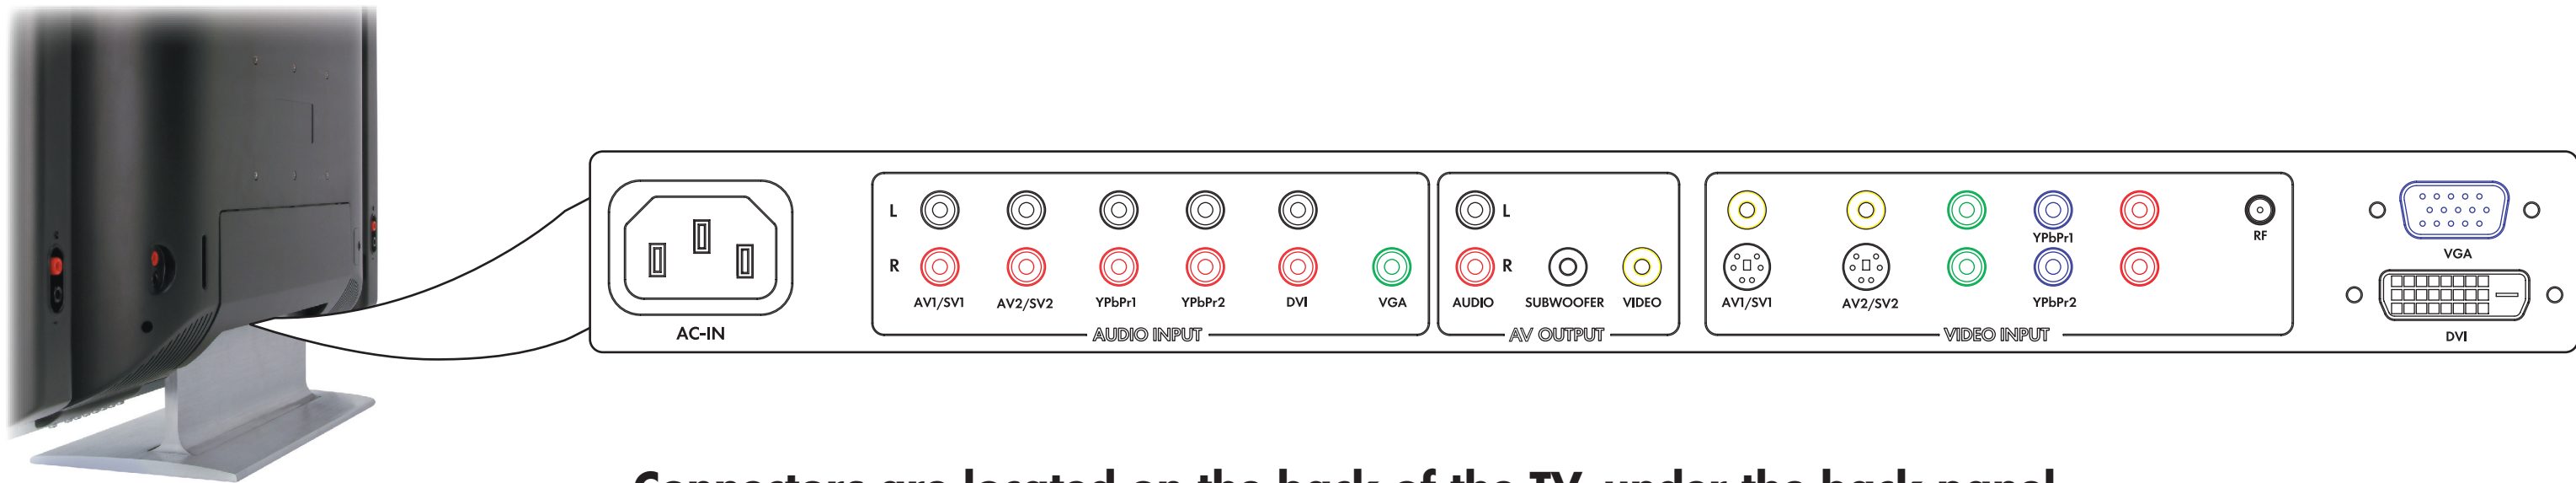


Connectors are located on the back of the TV, under the back panel.
Remove rear door before making connections.


1 Attach Speaker Cables to TV

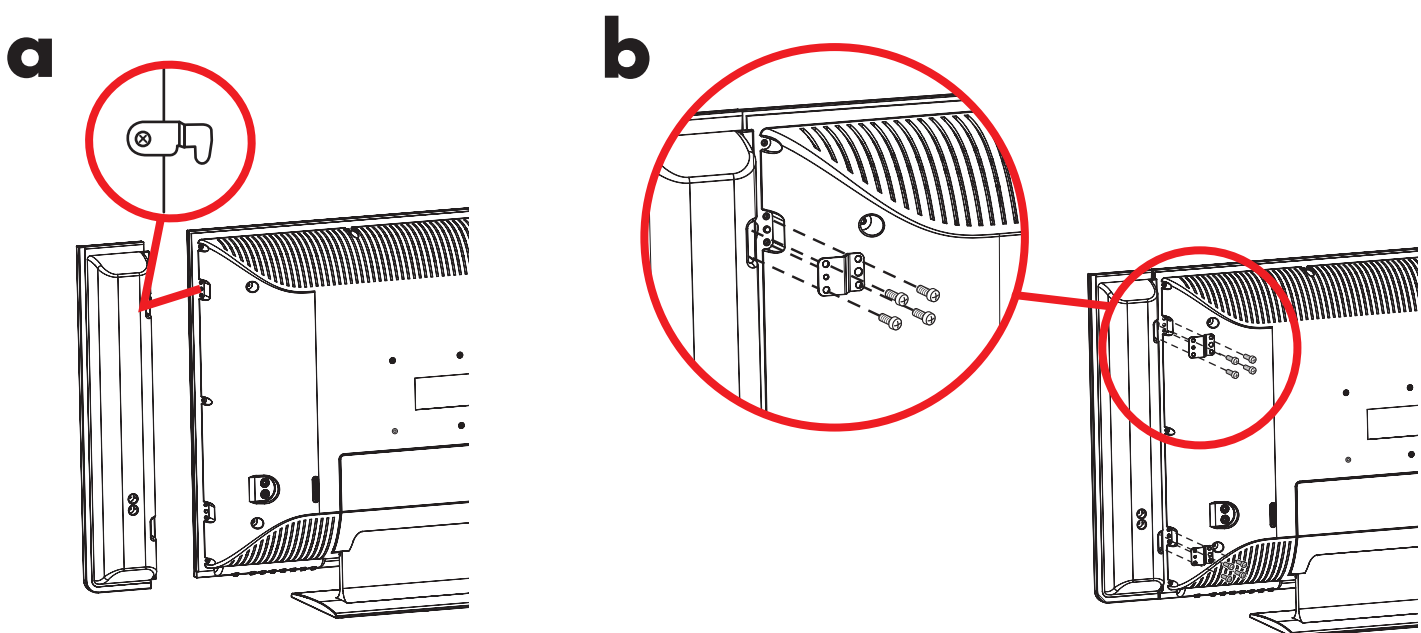


2 Connect Speaker Cables

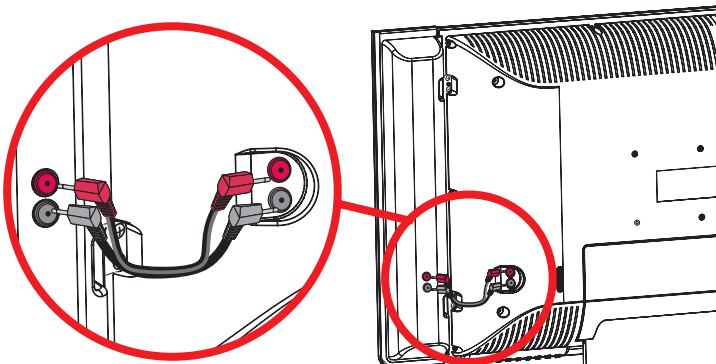


3 Connect Subwoofer (optional)

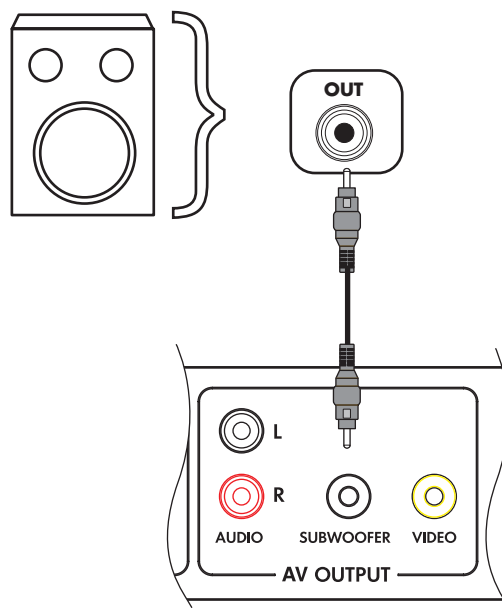


4 Connect a PC or Other Device by DVI

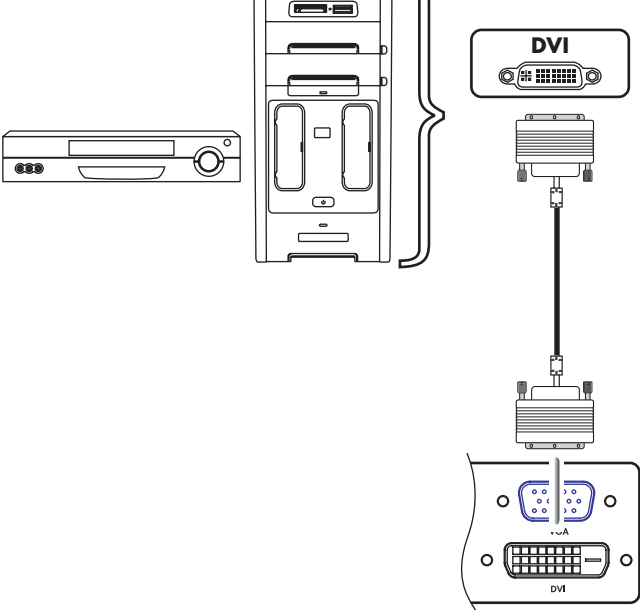


5 Connect a Component (YPbPr) Device

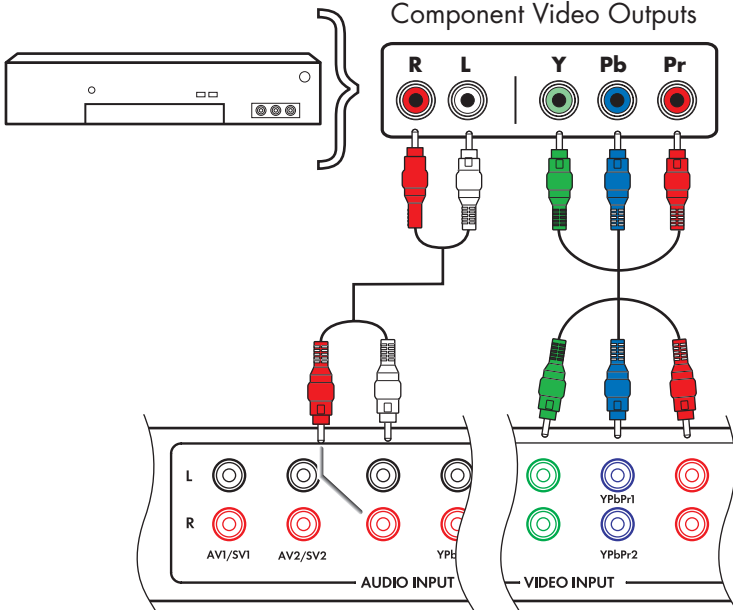


6 Connect an S-video Device

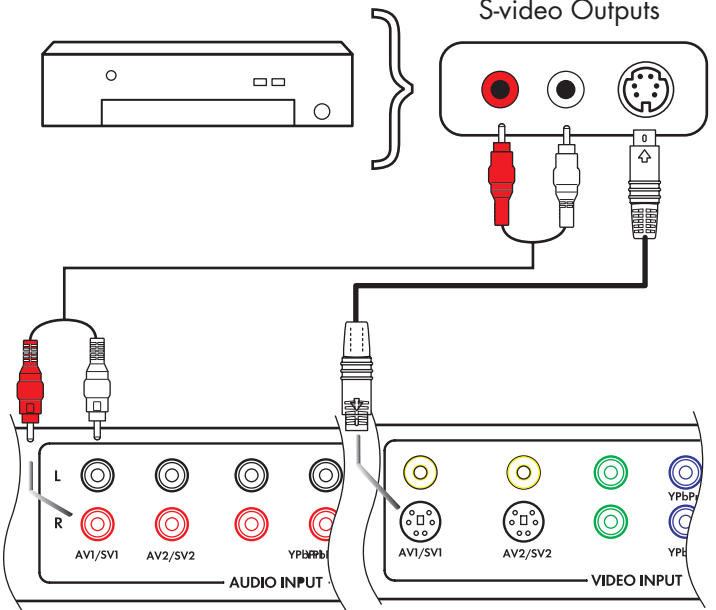


7 Connect a Composite Device

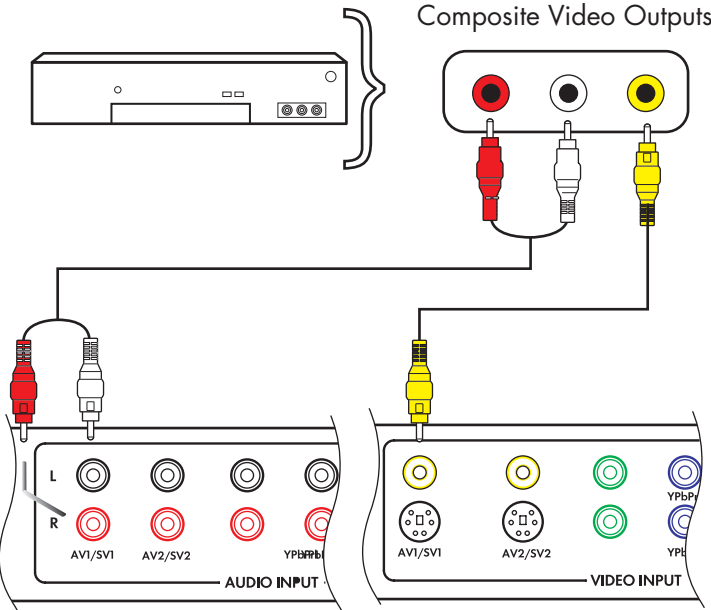


8 Analog Video from PC

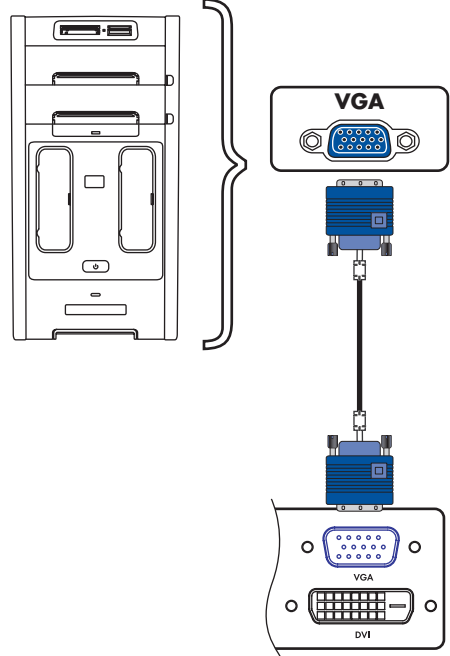


9 Outdoor Antenna Connection

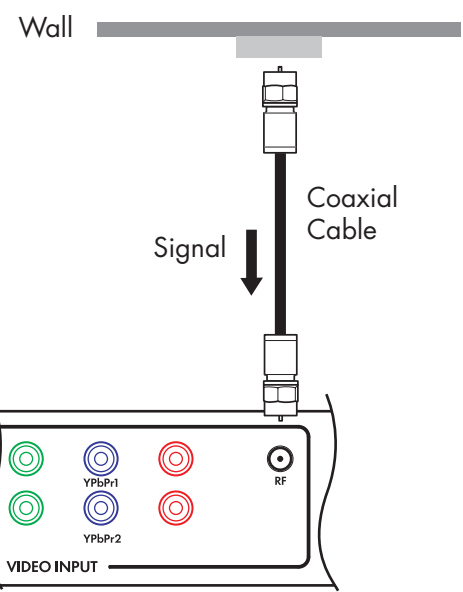

10 Remote Control

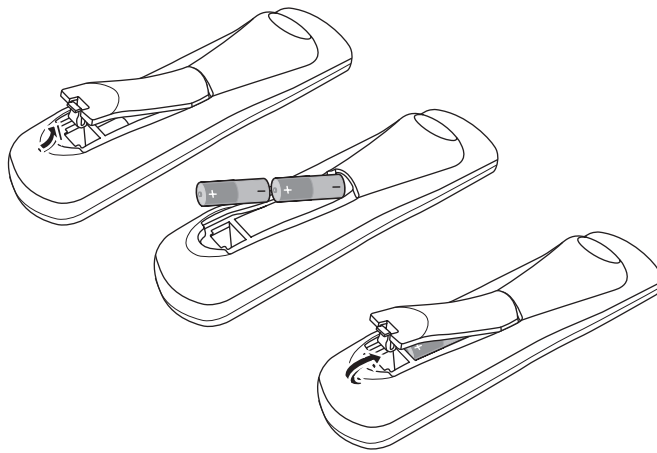

11 Turn On

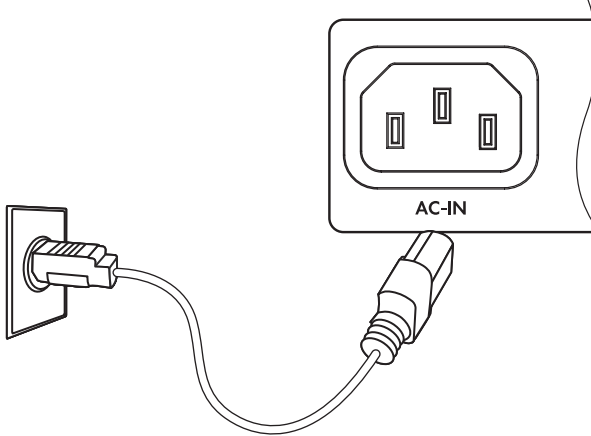

Once the power cable is connected, turn on TV by pressing PWR on the remote control.
Refer to the section in the user documentation titled "First Time Setup for Channels" to complete TV setup.
Refer to the user documentation for advanced connections.



© 2004 Hewlett-Packard Development Company, L.P.
Printed in
www.hp.com

